# Creative ZEN MX

## Audible User Guide

## System Requirements:

| | | | |
|---|---|---|---|
| ○ Windows Operating System(s): | Windows XP (Service Pack 2 or higher), Vista, 7 | ○ AudibleManager Version: | 5 or higher |
| ○ Mac Operating System(s): | N/A | ○ Windows Media Player Version: | 11 or higher |

## Audible Features:

| | |
|---|---|
| ○ Audible Formats Supported: 4 | ○ Section Navigation: Yes |
| ○ Bookmarking: Yes | ○ Variable Playback Speed: Yes |

# Device Layout:

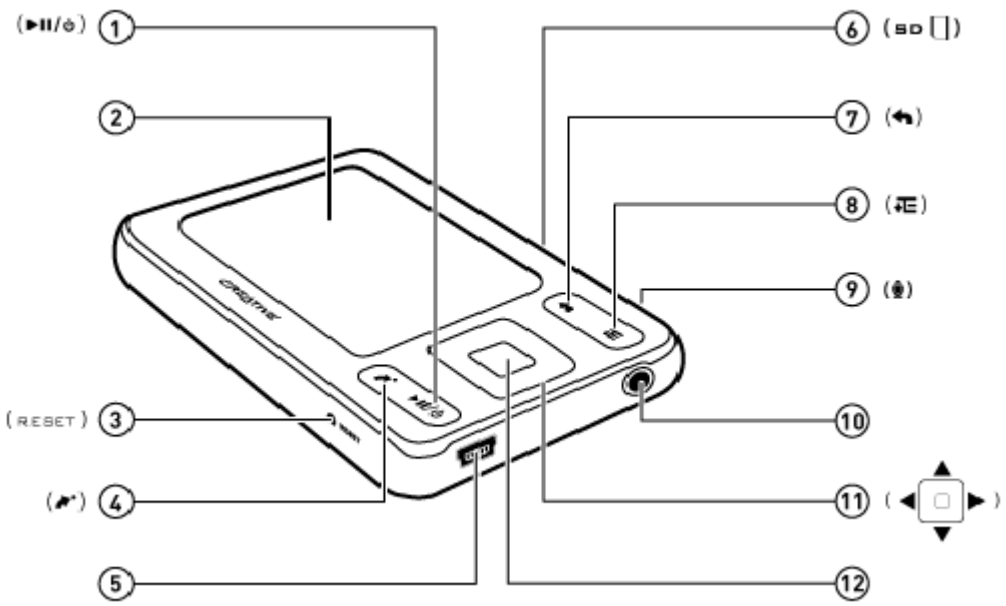


1. On/Off/Play/Pause
2. Display
3. Reset
4. Shortcut (user defined)
5. USB plug
6. Slot for SD card
7. Menu back
8. Options
9. Microphone
10. Earphones jack
11. Volume/Direction pad
12. OK button

# How To's:

## **Playback** - *How do I locate and play Audible content on my device?*

**Step 1.** From the main menu, scroll to and select **Music**.
**Step 2.** Scroll to and select **Genres**.
**Step 3.** Scroll to and select **Audio book** or **Spoken word**.
**Step 4.** Scroll to and select the author of the title in which you wish to play.
**Step 5.** Scroll to and select the audiobook you wish to play.
**Step 6.** With the book title highlighted, press the **Play/Pause** button or select the book and when the menu shows select **Play**.

## **Rewind/Fast-Forward** - *How do I rewind or fast-forward an Audible book?*

### Rewind

**Step 1.** Press and hold the **rewind** button (left on the direction pad).

### Fast-Forward

**Step 1.** Press and hold the **fast forward** button (right on the direction pad).

## **Section Navigation** - *How do I navigate through sections within an Audible book?*

**Step 1.** While the title is playing, press the **center** button and you will see the timeline show hash marks indicating the sections.
**Step 2.** Using the **left and right navigation**, you can skip forward and back through the sections within the title.

## **Bookmarking** - *How do I use bookmarking for Audible content?*

### Setting a Bookmark

**Step 1.** While the title is playing, press the **Menu** button.
**Step 2.** Scroll to and select **Set Bookmark**.
**Step 3.** Scroll to and select a bookmark slot (1-10).

### Accessing a Bookmark

**Step 1.** From the main menu, scroll to and select **Music**.
**Step 2.** Scroll to and select **Bookmarks**.
**Step 3.** Scroll to and select the desired bookmark.

### Removing a Bookmark

**Step 1.** From the main menu, scroll to and select **Music**.
**Step 2.** Scroll to and select **Bookmarks**.
**Step 3.** Scroll to and highlight the desired bookmark.
**Step 4.** Press the **Menu** button and then choose **Clear Bookmark**.